


# VAPORITE® INSTRUCTION MANUAL

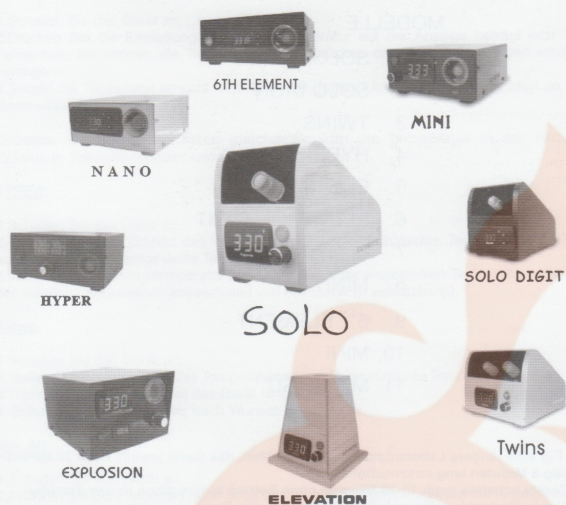

## Solo, Twins, Elevation, Mini

1. Turn the unit on.
2. Set the temperature by turning the knob as desired.
3. When the light turns off it means the unit is ready for use.

## Solo Digit, Elevation Digit, Mini Digit

1. Turn the unit on.
2. Press the set key the temperature now on screen is 310 degree Fahrenheit. You can Raise or Lower the temperature by pressing Up and Down arrow key at any point of time.
3. Once the temp. is reached you will see a green light starts blinking indicating that unit is ready for use.

Press both arrow keys simultaneously to change display temperature from centigrade to Fahrenheit or vice versa.

## HYPER

1. Turn the unit on.
2. Set the temperature by turning the knob as desired will be shown in screen as Set Temperature.
3. When the Setting temperature in the screen is equal to Set Temperature, the fan will automatically turned ON and the unit is ready for use.

## Blown

1. Turn the unit on.
2. Set the temperature by turning the knob as desired.
3. When the light turns off it means the unit is ready for use.
4. Turn On or Off the fan when desired.

## Mini Air

1. Turn the unit on.
2. Press the Up or Down key The temperature now on screen is 310 degree Fahrenheit. You can Raise or Lower the temperature by pressing Up and Down arrow key.
3. Once the temp. is reached you will see a green light starts blinking indicating that unit is ready for use.

-23-

throat tissue. Users who are concerned about the respiratory hazards of smoking are strongly advised to use air freshener.

## Factors affecting vaporizer output

First of all, the wide range of results from tests of different vaporizers suggest that the choice of vaporizer is a major factor in determining delivery efficiency and the amount of harmful byproducts produced. Proposed factors affecting output include:

- Temperature;
- Specimen density,
- Weight, content of water and essential oils,
- Consistency of material in the filling chamber
- Different preparations such as crude flower tops, herbs , extracts & oil, etc.
- Storage time of the vapor
- Proportion of active ingredients exhaled (breathing technique)

Not all those have been scientifically tested. Research using the vaporizer found the delivery efficiency highest at around 226 degrees Celcius, falling to about half efficiency at 150 to 180 degrees depending on material. The purest preparations produced the highest efficiencies, about 54% for pure herb versus 29% for plant material ( flower tops) with 12% active ingredient content. Using pure herb, no degradation products or unknown compounds were detected. The longer vapor is stored, the more of the active ingredient is lost as it condenses on the surface of the vaporizer or the balloon. This loss may be negligible over a few minutes but may exceed 50% after 90 minutes.

## Vaporite Limited Manufacturer's Warranty

All our products come with a Two Years warranty. You *must* register your product within the first 7 days of purchase in order to validate the warranty. The warranty only covers manufacturer's defects. Any physical damage to the product is *not* covered under the warranty.

All units sold at or above the MAP come with a Two Years Limited Manufacturer's Warranty. The units sold below the MAP do not come with a Two Years Limited Manufacturer's Warranty.

What is covered : All manufacturing defects or defects in material or workmanship.

-25-

VAPORITE®

## INSTRUCTION MANUAL

### MODELS

1. SOLO
2. SOLO DIGIT
3. TWINS
4. HYPER
5. ELEVATION
6. ELEVATION DIGIT
7. BLOWN
8. MINI AIR
9. 6<sup>TH</sup> ELEMENT
10. MINI
11. MINI DIGIT

EN

**Caution:** For longer life of the unit, turning the unit off for about 5 minutes after every 20 minutes of usage is recommended. Digital Units will automatically go to Standby mode after 15-20 minutes of no operation. This feature is added for longer life.

-22-

Press both arrow keys simultaneously to change display temperature from centigrade to Fahrenheit or vice versa.

## 6th Element

1. Turn the unit on.
2. Press the set key the temperature now on screen is 310 degree Fahrenheit. You can Raise or Lower the temperature by pressing Up and Down arrow key.
3. Once the temp. is reached you will see a green light starts blinking indicating that unit is ready for use.
4. Fan key is to switch On or Off the fan when required.

Press both arrow keys simultaneously to change display temperature from centigrade to Fahrenheit or vice versa.

## Benefits of Vaporizing

Essential oils are vaporized because when we breathe these tiny molecules of vaporized essential oils, they stimulate the odor receptors that are situated to the base of the nose. These odor receptors are directly connected to a part of the brain that is called the Limbic system. This Limbic system is responsible for memory, moods and emotions.

All essential oils have different properties, bergamot, lavender and ylang ylang help to relax and unwind after a stressful day while black pepper, cardamom, lemon and rosemary revitalize a way mind.

These oils can also be vaporized to stop the spreading of germs and purify the air we breathe, thus preventing the spreading of colds and flu from one family member to another. Not only this, vaporizing also helps to get rid of unwanted smells.

## Health Benefits of Vaporization

Vaporization produces **no combustion byproducts** such as Carbon Monoxide, Tar or other harmful elements.

Vapor is also **considerably cooler than smoke** and less likely to damage sensitive lung and

-24-

What is not covered : Damages resulting from but not limited to the following : misuse, unreasonable use, neglect, overusing the unit, dropping or otherwise shocking the unit, accident improper service or normal wear and tear or other cause not arising from defects in material and/or workmanship. This warranty does not cover accessories or other removable parts such as glass parts and power cable.

Warranty Period : This warranty covers Two Years period beginning the date of original purchase. This product is warranted to the original purchaser only.

Terms and condition of this warranty: During the warranty period, if your unit fails to work properly when used under normal condition, Vaporite will repair or replace without any charge. The end user is responsible for the shipping charges.

Additional Warranty limitations : Beside the aforementioned circumstances, the warranty will not be honored if you fail to register the unit with the correct serial number and the other information required to get the warranty at our website [www.vaporite.net](http://www.vaporite.net)


Failed Warranty Policy : If you have intentionally damaged the unit or failed to register for warranty, You may send the unit back to warranty processing center with a check or money order for a new replacement at a discounted price.

To obtain service under the terms of this warranty: Please email our warranty Department to obtain a RMA number and the return address before sending your unit for service. You must ship your unit with RMA number mentioned on the outer package for faster processing. Please choose a shipping method with delivery confirmation. Vaporite is not responsible for returns not received or damaged due to improper packing.

1. All warranty claims must be accompanied by the original receipt of purchase.
2. All units must be registered within 7 days of purchase.
3. The customer is responsible for all shipping charges.

In order to register your unit, follow the instructions inside the box or our website [www.vaporite.net](http://www.vaporite.net).

Shipping will be paid by the customer.

CE  micropac.eu

-26-