


MAT REPLACEMENT

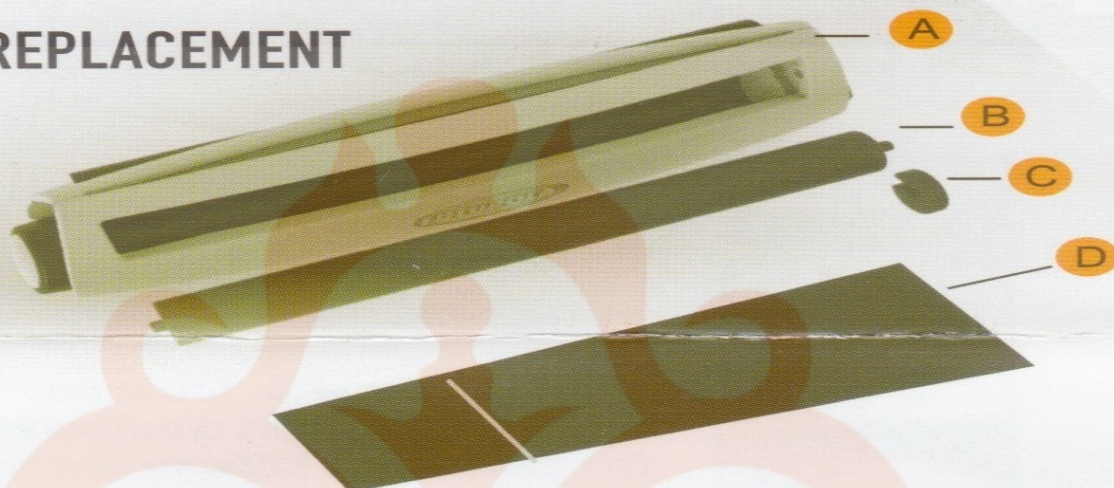

- 1 Open up the roller **A** and find the C-clip **C** by carefully sliding the sleeve **D** aside just a bit (figure 1).
- 2 Remove the C-clip **C** and do the same on the side of the roller (figure 2). Removing the C-clips can best be done by using f.i. a toothpick to push out the clips
- 3 Now you can slide the rollers **B** out with a gentle push (figure 3) and remove the old sleeve **D** (figure 4).
- 4 Now replace the old sleeve with the new one **C** and put the rollers back in the same direction as they came out (figure 5).
- 5 Carefully replace the C-clips **C** on both sides of the roller. This will lock the rollers back in place and your roller is now ready for use.

